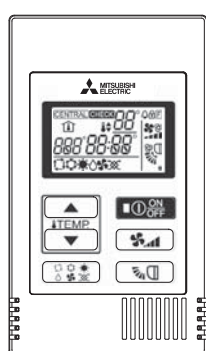


2-6. Simple MA remote controller [PAC-YT52CRA]

Dual
Set
Point

- Control: ON/OFF, room temperature, vane, fan speed, and operation mode
- The only wiring required is cross-over wiring based on two-wire signal lines.
- Room temperature sensors are built-in.
- Set temperature range limit
- Can operate all types of indoor units
- * : Since this controller has limited functions, it should always be used in conjunction with standard controller or centralized controller.
- Backlit LCD
- Flat back


■ Functions

○:Each group ×:Not available

Item	Description	Operations	Display
ON/OFF	Changes between ON and OFF.	○	○
Operation mode switching *1	Select from COOL, DRYING, FAN, AUTO, and HEAT.	○	○
Temperature setting *1	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	○	○
Fan speed setting	Changes the fan speed. *The settable fan speed varies depending on the indoor unit model to be connected.	○	○
Vane setting	Switches the vane directions. *The settable vane direction varies depending on the indoor unit model to be connected.	○	○
Ventilation equipment control	When the CITY MULTI indoor unit is connected, interlocked setting of the CITY MULTI Lossnay unit is possible. When the Mr. SLIM indoor unit (A-control) is connected, interlocked operation of the LGH-R(V)X Type Lossnay unit is possible.	○	○
Backlight	Pressing the button lights up a backlight. The light automatically turns off after a certain period of time. (The brightness settings can be selected from Bright, Dark, and Light off.)	○	○
Error information	Displays the current error status with the address. *The address may not be displayed depending on the error status.	—	○
Allows/disallows local operation	By setting a centralized controller, the following local operations can be prohibited: ON/OFF, operation mode, preset temperature; *The CENTRAL icon appears while local operations are prohibited.	×	○
Operation lock	Locks all buttons.	○	○
Temperature range restriction	The preset temperature range can be restricted for each operation mode (COOL/HEAT/AUTO).	○	○
Room temperature detection	The temperature sensor is built-in on the remote controller.	—	—
Various settings	The following settings can be made by setting the dip switches. • Remote controller Main/Sub setting • Temperature display unit setting (Celsius/Fahrenheit) • Cooling/heating display in AUTO mode • Indoor temperature display	—	—

*1 AUTO mode is settable only when those functions are available on the indoor unit.

■ System example

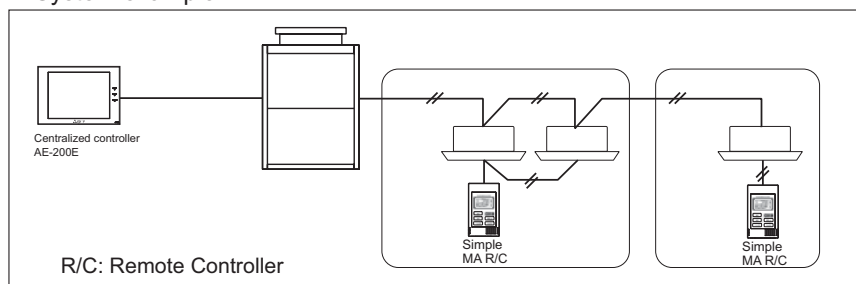

■ External dimension

